

## **GVH-C VENTLESS HOOD CLEANING & TROUBLESHOOTING**

<b>PROVEN &amp; TRUSTED SINCE 1952</b>	Cleaning Instructions					<b>PROVEN &amp; TRUSTED SINCE 1952</b>	
STEP 1: DAILY CLEANING	Y CLEANING STEP 2: TURN POWER OFF STEP 3: REMOVE FILTER ACCESS COVER or OPEN FILTER DOOR				STEP 5:	CLEANING AGENT	
The BAFFLI FILTER & E CELL must b cleaned da	AC appliand place ho	F cooking the power & bod Power in the [OFF]	Unlatch & open the filter cabinet Door	hood b frame & pulli Avoid	AC CELL from by grapsing and/or handle ng from hood. touching fins zer wires.	Simple Green FOAMING CRYSTAL Spray is recommended for cleaning the EAC COLLECTOR CELL. NOTE: Using caustic degreasing cleaners may damage the EAC cell & void the warranty. DO NOT use cleaners not approved as safe for aluminum, or not authorized by Giles.	
STEP 6: APPLY SPRAY DEGREASER	GREASE BUILD-UP STEP 8: RINSE & DRY OV	STEP 9: REMOVE BAFFLE FILTER	STEP 10: CLEAN BAFFLE	FILTER			
Place on drain boat the <u>FOAMING CRY</u> cleaner so as to co surfaces of fins & f ensure all brass co also covered flip repeat on the othe <u>DO NOT WASH IN DIS</u> SCRUB W/ BRUSH IN 3-CC SINK.	RESTAL ver all rrame, ntacts are o over & er side.	sides with cleaner, s well as both sides of ach fin. Allow roduct to soak for 5 - 0 minutes. After nsing a 2nd oplication may be	fully & oughly rinse hot water y. Stand <b>CELL</b> ght on a dish ner, with tact Board up & w to completely overnight.	Slide DOUBLE BAFFLE FILTER fr hood by using har & pull straight of	om Indle	Rotate latches, open <b>FILTER</b> soak in sink containing a mild degreasing solution, or spray with <b>Foaming Crystal</b> <u>Cleaner</u> . Use soft bristle brush to remove residue. Rinse thoroughly with clean hot water spray. Leave open, stand upright on drain board & allow to completely air dry overnight. <i>Filter is</i> <i>typically dishwasher safe</i> .	
STEP 11: REINSTALL FILTERS       STEP 12: CHARCOAL FILTER MAINTENANCE       STEP 13: MONTHLY FILTER CABINET CLEANING         NOTE: All models have interlocks which       NOTE: All models have interlocks which							
Ampliance       LEFT & BAFFLE FILTER handle point of and the local data of the l						the cooking appliance if filters are lamaged, or in need of cleaning. npt to bypass these interlocks an possibly void the factory	
Powered Light Check Wash					Problem: NO APPLIANCE POWER,		
	Problem: WASH LIGHT ON, BEEPING TONE ALARM SOUNDING			FIDDIEIII. CHECK LIGHT ON		NO ALARMS SOUNDING and HOOD IS ON	
Filter Missing Light Filter Clogged Light	1. EAC Cell missing or excessively dirty1. Install or clean EAC cell2. Poor contact - board dirty/faulty2. Clean or replace contact board or CALL FOR SERVICE			1. EAC shorted/too many bent fins touching	<ol> <li>Repair EAC/ Straighten fins</li> <li>CALL FOR SERVICE</li> <li>Dry EAC Cell</li> </ol>	CALL FOR SERVICE	
Problem: CLOGGED FILTER LIGHT ON, CONTINUOUS TONE ALARM Problem: FILTER MISSING LIGHT ON, NO ALARM SOUNDING		Problem: HOOD WILL NOT TURN ON					
PROBABLE CAUSE:	REPAIR:	PROBABLE CAUSE:	REPAIR:	PROBABLE CAUSE:	REPAIR:		
1. Charcoal filter clogged	1. Replace charcoal filter	1. Baffle filter missing	1. Install baffle filter	1. Improper start-up procedure	1. Press & hol	d top "START" portion of Power Switch	
2. Baffle filter clogged	2. Clean baffle filter	2. Baffle filter not installed properly	2. Reinstall baffle filter	2. Power switch bad     2. CALL FOR SERVICE		ERVICE	
3. Vacuum switch out of adjustment	3. CALL FOR SERVICE	3. Charcoal filter missing	3. Install charcoal filter	3. Hood cover or door not closed & latched 3. Close hood cover or door			
4. Kinked vacuum line	4. CALL FOR SERVICE	4. Charcoal filter not installed properly	4. Reinstall charcoal	4. Supply power breaker tripped	4. Reset circui		
5. Fan running slow	5. CALL FOR SERVICE		filter			ALL FOR SERVICE ALL FOR SERVICE or replace fuse	

1-800-554-4537

hood.







- 6. CALL FOR SERVICE or replace fuse